
## A2 Oven specification

## 1. Accesories bag

Salver\*1 、 Air spring\*1 、 U handle\*2 、 tool+screw\*1 set

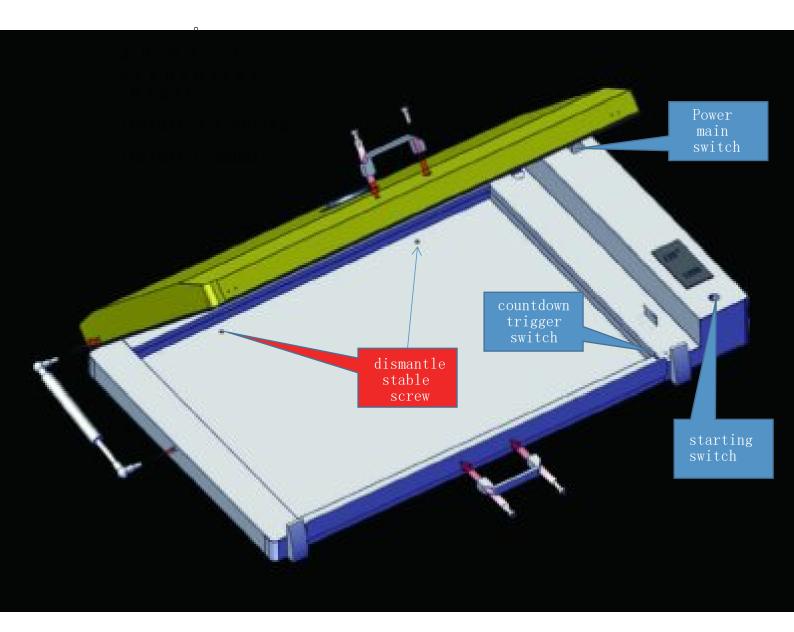

## 3. Temperature control panel

temperature setting, constant

temperature control, set the countdown.

The factory temperature is set to 150, 20S.

Adjust the temperature and countdown according to the actual situation.

3.1 Click the temperature setting key, set the temperature value blinking,

(instrument display setting temperature) Click the up and down button, add or subtract the temperature, Click the temperature setting button again to exit the setting.



(Instrument display the current temperature)

3.2 Click the time setting key, set the time value flashing, (instrument display set time) click the up and down button, add or subtract time,

Click the time setting button again to exit the setting. (Instrument shows the remaining time of countdown)

## 4. using

Power on and press the start switch, wait for the oven to heat up to the set constant temperature value, drag out the salver into the flat print film, push it into the oven, and start the countdown. The countdown is over, the buzzer sounds, remove the print film and finish drying

5. Parameters

Nominal voltage	220/110V	Power	3.1/1.5KW
Temperature range	Normal temperature <b>~190</b> °C	Drying size	A2
		Net weight	25.5kg
Package size	L915*W597*H160mm	Gross weight	27.5kg